

# DECT 6.0 CORDED/CORDLESS TELEPHONE

## QUICK START GUIDE

Model number:  
30524



### Thank you for choosing GE!

Please take a moment to register your product online. Just go to [www.gephones.com](http://www.gephones.com) and click "register here" from the home page. Provide your email address and receive product updates, special offers, or discounts on future purchases. It will not diminish your warranty rights if you choose not to register.

#### Assistance and more information

For product assistance or for more information about accessories, visit our website at [www.gephones.com](http://www.gephones.com) or call our customer service center at 1-877-394-9775 (USA) or 1-877-395-7907 (Canada).

For complete feature descriptions and operations, please refer to the user's guide for your 30524 telephone system.

#### Parts checklist

Your telephone contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

Item	Model number	Quantity
- Telephone base with convertible base mount attached - Power adapter for telephone base - Handset coiled cord - Corded handset - Telephone line cord - User's guide	30524EE2	1
	30524EE3	1
	30524EE4	1
	30524EE5	1
- Cordless handset - Charger - Power adapter for charger - Battery - Battery compartment cover	30524EE2	1
	30524EE3	2
	30524EE4	3
	30524EE5	4

### Telephone base layout

**ans on/off**  
Press to turn the answering system on or off.

**repeat**  
Press to repeat a message, or press twice to play the previous message during message playback.

**play/stop**  
Press to play messages or stop playback.

**skip**  
Press to skip to the next message during message playback.

**delete**  
• Press to delete the message during playback.  
• Press and hold to delete all old messages when in idle mode.

**CID/up**  
• Press to review the call log when the telephone is not in use.  
• While in menu, press to scroll up.  
• Press to increase the volume during playback or call screening.

**phonebook/down**  
• Press to review the phonebook when the telephone is not in use.  
• While in menu, press to scroll down.  
• Press to decrease the volume during playback or call screening.

**flash/back**  
• During a call, press to answer an incoming call if you receive a call waiting alert.  
• During programming, press to cancel and exit without making changes.

**menu/ok**  
• Press to show menu.  
• Press to select an item, or to save an entry or setting.

**ans**  
Press to turn the answering system on or off.

**rep**  
Press to repeat a message, or press twice to play the previous message during message playback.

**play/stop**  
Press to play messages or stop playback.

**skip**  
Press to skip to the next message during message playback.

**del**  
Press to delete the message during playback. Press and hold to delete all old messages when in idle mode.

**CID**  
Press to review the call log when the telephone is not in use. While in menu, press to scroll up. Press to increase the volume during playback or call screening.

**vol**  
Press to increase the volume during playback or call screening.

**int**  
Press to initiate an intercom call or transfer a call.

**DND**  
Press to turn global DND mode on or off.

**redial**  
Press to review redial list.

**format**  
Press to change the telephone number format (7 digits, 1+, or 1+ area code) for appropriate dialing.

**mic**  
Press to make or answer a call using the speakerphone. During a call, press to switch between speakerphone and corded handset use.

**#\*/pause/ringer off**  
• Press and hold to add a dialing pause when dialing or entering numbers into phonebook.  
• Press and hold to turn the ringer off.

**PPT**  
Press to initiate a PPT intercom with system handsets.

**mute**  
Press to mute a call, press again to resume conversation.

**speaker**  
• Press to make or answer a call using the speakerphone.  
• During a call, press to switch between speakerphone and corded handset use.

**redial/format**  
• Press to review redial list.  
• Press to change the telephone number format (7 digits, 1+, or 1+ area code) for appropriate dialing.

**\*/tone**  
During a call, press to send touch-tone signals temporarily.

**intercom/find**  
Press to page system handsets, initiate an intercom call, or transfer a call.

**Do not disturb**  
Press to turn global DND mode on or off.

**int**  
Press to initiate an intercom call or transfer a call.

**DND**  
Press to turn global DND mode on or off.

**redial**  
Press to review redial list.

**format**  
Press to change the telephone number format (7 digits, 1+, or 1+ area code) for appropriate dialing.

**mic**  
Press to make or answer a call using the speakerphone. During a call, press to switch between speakerphone and corded handset use.

### Handset layout

**CID/volume up**  
• Press to review the call log when the telephone is not in use.  
• While in menu, press to scroll up.  
• During a call, press to increase the incoming volume.

**flash**  
• During a call, press to answer an incoming call if you receive a call waiting alert (if you have subscribed to the call waiting feature from your service provider).  
• Press to access message playback when in idle mode.

**talk/speaker**  
• Press to make or answer a call.  
• Press to switch to speakerphone during a call or message playback.  
• During a call, press to switch between speakerphone and normal handset use.

**del/int**  
• Press to delete the last number or letter entered.  
• Press to initiate an intercom call or transfer a call.

**\*/tone**  
During a call, press to send touch-tone signals temporarily.

**off/cancel**  
• During a call, press to hang up.  
• During programming, press to cancel and exit without making changes.

**menu/ok/mute**  
• Press to show menu.  
• Press to select an item, or to save an entry or setting.  
• Press to mute a call, press again to resume conversation.

**volume down**  
• While in menu, press to scroll down.  
• During a call, press to decrease the incoming volume.

**redial/format**  
• Press to review redial list.  
• Press to change the telephone number format (7 digits, 1+, or 1+ area code) for appropriate dialing.

**phonebook**  
• Press to review the phonebook when the telephone is not in use.

**#\*/pause/ringer off**  
• Press and hold to turn the ringer off.  
• Press and hold to add a dialing pause when dialing or entering numbers into phonebook.

**CID**  
Press to review the call log when the telephone is not in use. While in menu, press to scroll up. During a call, press to increase the incoming volume.

**flash**  
Press to answer an incoming call if you receive a call waiting alert (if you have subscribed to the call waiting feature from your service provider). Press to access message playback when in idle mode.

**talk/speaker**  
Press to make or answer a call. Press to switch to speakerphone during a call or message playback. During a call, press to switch between speakerphone and normal handset use.

**del/int**  
Press to delete the last number or letter entered. Press to initiate an intercom call or transfer a call.

**\*/tone**  
During a call, press to send touch-tone signals temporarily.

**off/cancel**  
During a call, press to hang up. During programming, press to cancel and exit without making changes.

**menu/ok/mute**  
Press to show menu. Press to select an item, or to save an entry or setting. Press to mute a call, press again to resume conversation.

**volume down**  
While in menu, press to scroll down. During a call, press to decrease the incoming volume.

**redial/format**  
Press to review redial list. Press to change the telephone number format (7 digits, 1+, or 1+ area code) for appropriate dialing.

**phonebook**  
Press to review the phonebook when the telephone is not in use.

**#\*/pause/ringer off**  
Press and hold to turn the ringer off. Press and hold to add a dialing pause when dialing or entering numbers into phonebook.

visit our website:

[www.gephones.com](http://www.gephones.com)



is a trademark of General Electric Company and is under license by CCT Tech USA Inc., Irving, TX 75039

Model 30524  
P/N: XXX  
Version 1 02/2011  
Printed in China

©2011 CCT Tech USA Inc.  
Distributed in the U.S.A. by  
CCT Tech USA Inc.

