

User's Guide

Model: 30521



DECT
Cordless Telephone
Your new GE telephone system is EXPANDABLE up to 5 handsets




Introduction

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **Important safety instructions** section in this user's guide for more information.

IMPORTANT: Since cordless phones operate on electricity, you are suggested to have at least one phone in your home that is not cordless, in case of power outage.


Parts Checklist

Make sure your package includes the items shown below.

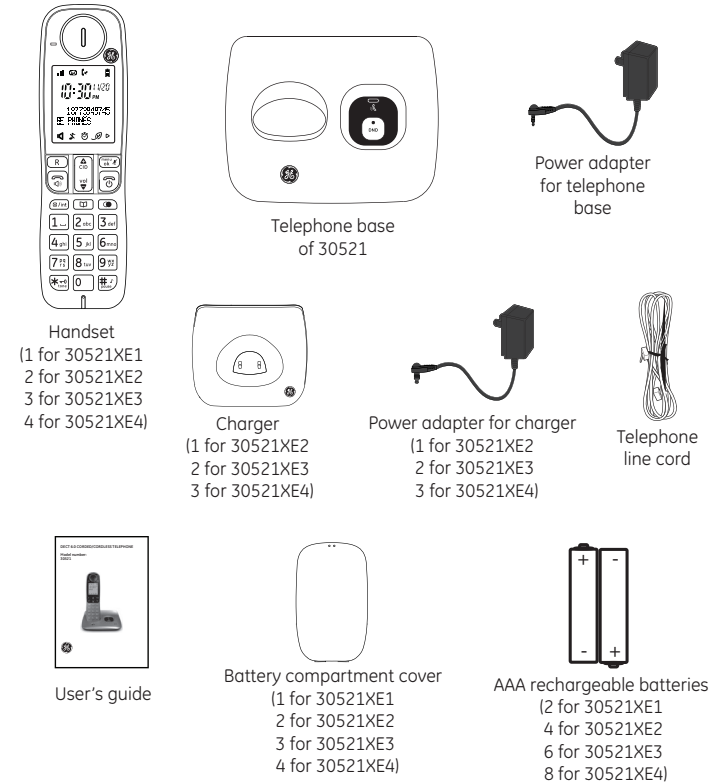


Battery installation

For optimum battery performance, charge the battery for 16 hours before first use.

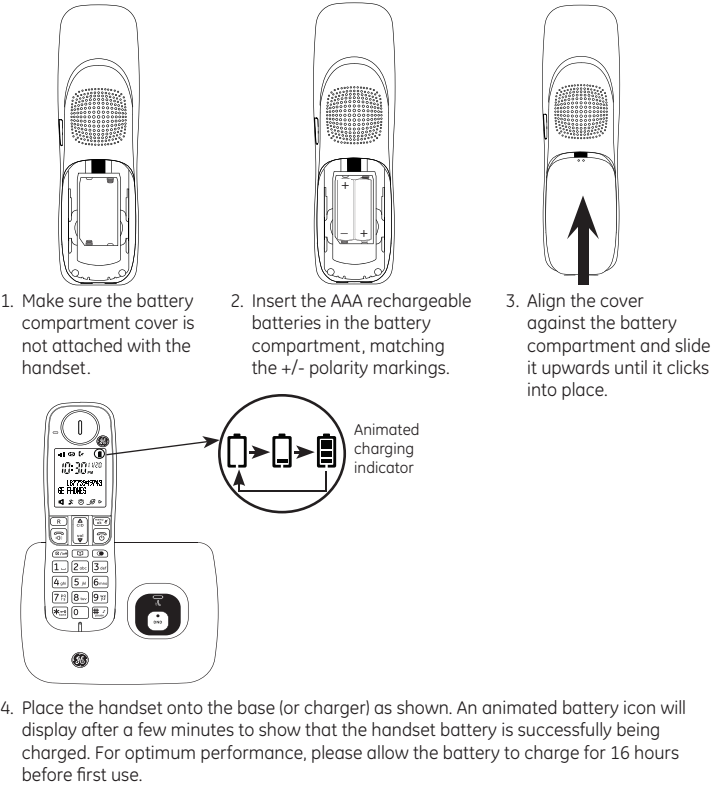

CAUTION:
1. To reduce the risk of fire or personal injury, use only the CCT Tech Global Limited approved model (400mAh 1.2V Ni-MH) which is compatible with this unit.
2. If the handset will not be used for an extended period of time, unplug the battery and remove it from the handset to prevent possible leakage.

Telephone base layout

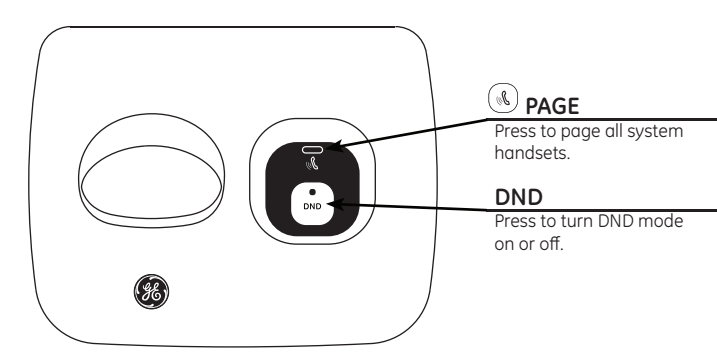

Battery charging

The following table summarizes the battery charge indicators and what actions need to be taken.

Battery indicators	Battery status	Action
Battery icon is scrolling.	Battery is charging.	Keep the handset in the telephone base or charger when not in use.
Battery icon is on steadily.	Battery is completely charged.	The handset is ready for use. It will take approximately 2 hours for the battery icon to indicate a full charge even if the handset is only removed from the telephone base or charger for a short time and replaced. This is a normal operation and does not indicate a battery issue.
Battery icon is empty and the screen shows LOW BATTERY .	Battery is low.	Place the handset in the telephone base or charger for at least 16 hours without interruption (at least 30 minutes) before use.
The screen is blank.	Battery has no power while the handset is out of the telephone base or charger.	Place the handset in the telephone base or charger for at least 16 hours without interruption. See troubleshooting for help if the screen remains blank after charging.

Main Menu	Sub-menu 1	Sub-menu 2
PHONEBOOK	ADD NEW	ADD NEW (When reviewing phonebook entry) EDIT CONTACT DELETE CONTACT DELETE ALL
BLOCK LIST	ADD NEW	ADD NEW (When reviewing block list entry) EDIT CONTACT DELETE CONTACT DELETE ALL
PROGRAM DND	OFF	ONE TIME DAILY
CLOCK & ALARM	SET DATE/TIME	SET FORMAT TIME FORMAT DATE FORMAT
SETTINGS	ALARM TONE	LANGUAGE EQUALIZER ENERGY SAVE
HANDSET TONES	RING VOLUME	RING MELODY KEY BEEP
ADV SETTING	REGISTER	DEREGISTER RESET AREA CODE FLASH TIME DIAL MODE

Registering a handset

The telephone system can support up to a total of 5 cordless handsets. Handsets that were included with your main base are pre-registered. To add or re-register a handset:

- Press and hold **[OK]** on the base for 5 seconds until a beep sounds.
- [OK]** when handset displays **REGISTER YOUR HANDSET**.
- Enter the **PIN** (default: **0000**) -> **[OK]**.

A beep sounds on the handset when the registration is successful.

NOTES:
1. An error tone will sound if the registration is not successful.
2. This product is compatible with model 30520 accessory handsets only.

Deregistering a handset

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADV SETTING** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **DEREGISTER** -> **[OK]**.
- Enter the **PIN** (default: **0000**) -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: Select the desired handset -> **[OK]**.

Handset settings

Ringer volume

You can set the handset ringer volume from level 1 to level 5 or turn the ringer off.

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **HANDSET TONES** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **RING VOLUME** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: Select the desired setting -> **[OK]**.

NOTE: Press and hold the **[MUTE]** key to switch the ringer between on and off when the handset is in idle mode. The **[MUTE]** icon displays on the screen when ringer off feature is activated.

Ringer melody

You can select from 10 ringer tones.

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **HANDSET TONES** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **RING MELODY** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: Select the desired setting -> **[OK]**.

Block list

You can program telephone numbers into the block list so that the telephone silences when a call is received from one of the blocked numbers. The handset shows **BLOCK LIST** when the programmed numbers call and will not record the number in the caller ID history.

To add a new entry

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **BLOCK LIST** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADD NEW**.
- Enter the desired number -> **[OK]**.

To view the list

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **BLOCK LIST** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: to browse through the block list.

To edit an entry

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **BLOCK LIST** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select the desired entry -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **EDIT CONTACT** -> **[OK]** twice.
- Edit the number by using the **[X]** key to erase and backspace, then enter new numbers using the dial pad keys and press **[OK]**.

To delete an entry

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **BLOCK LIST** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select the desired entry -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **DELETE CONTACT** -> **[OK]** 3 times to confirm.


To delete all entries

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **BLOCK LIST** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select any entry -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **DELETE ALL** -> **[OK]** twice to confirm.

Telephone base and charger installation

- Plug the smaller end of the power adapter into the power jack at the bottom of the telephone base.
- Plug one end of the telephone line into the jack at the bottom of the telephone base.
- Plug the other end of the telephone line into a telephone wall jack.
- Plug the larger end of the power adapter into an electrical outlet not controlled by a wall switch.

If you have DSL high speed Internet service, a DSL filter is required (not included). Contact your DSL service provider for more information about DSL filter.

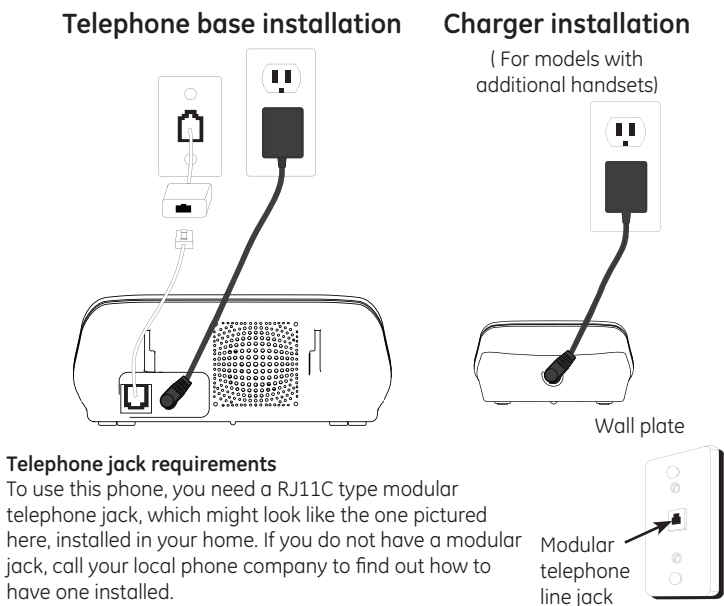


Telephone jack requirements
To use this phone, you need a RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you do not have a modular jack, call your local phone company to find out how to have one installed.

CAUTION:
1. Use only the power adaptor that came with this unit. (Telephone base: 6Vdc/500mA, charger: 6Vdc/150mA). Using other power adaptors may damage the unit. Contact your local distributor if you need to order replacement for the power adaptors.
2. To prevent fire or electrical shock hazard, do not expose this product to rain or moisture.


Wall mount installation (optional)

The telephone comes ready for desktop use. If you want to mount your telephone on the wall, you will need to purchase an optional wall mount bracket, contact your local distributor if you need to order one.

- Make sure the telephone line cord is unplugged from the modular jack and the power adapter cord is unplugged from the electrical outlet before installation.
- Thread the power cord through the center cut out of the wall bracket as shown below.
- Plug the power adapter cord into the jack on the back of the telephone base. Align the tabs at the top of the wall bracket with the recessed slots on the back of the base unit. Align the lower tabs of the wall bracket with the slots on the bottom of the base. Slide the wall bracket upwards until it locks into place. Be sure the power cord is threaded through the center opening and securely plugged in. Route the power cord through either slot at the bottom of the wall mount bracket.
- Plug one end of the telephone line cord into the jack on the back of the telephone base.
- Route the telephone line cord through the open slot at the bottom of the wall mount bracket, leaving about 8 inches from the slot to the end of the cord as shown. Plug the line cord into the jack on the wall plate. Align the holes on the mounting bracket with the mounting studs of the wall plate and slide the bracket down until it locks securely.
- Plug the power adapter into an electrical outlet. Be sure to avoid using an electrical outlet that is controlled by a wall switch. The handset may now be placed in the base for charging.
- Neatly tie the excess telephone line cord with a twist tie so it is held close to the bottom of the base unit.

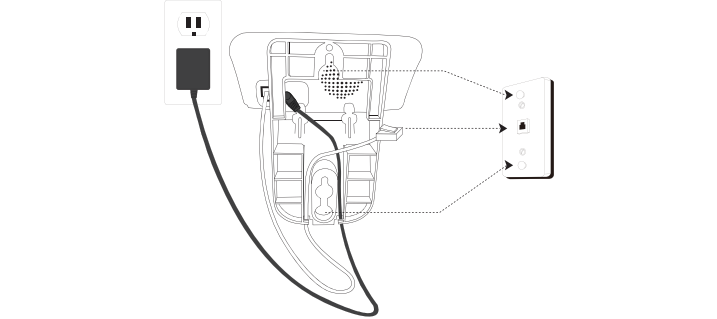

Handset layout

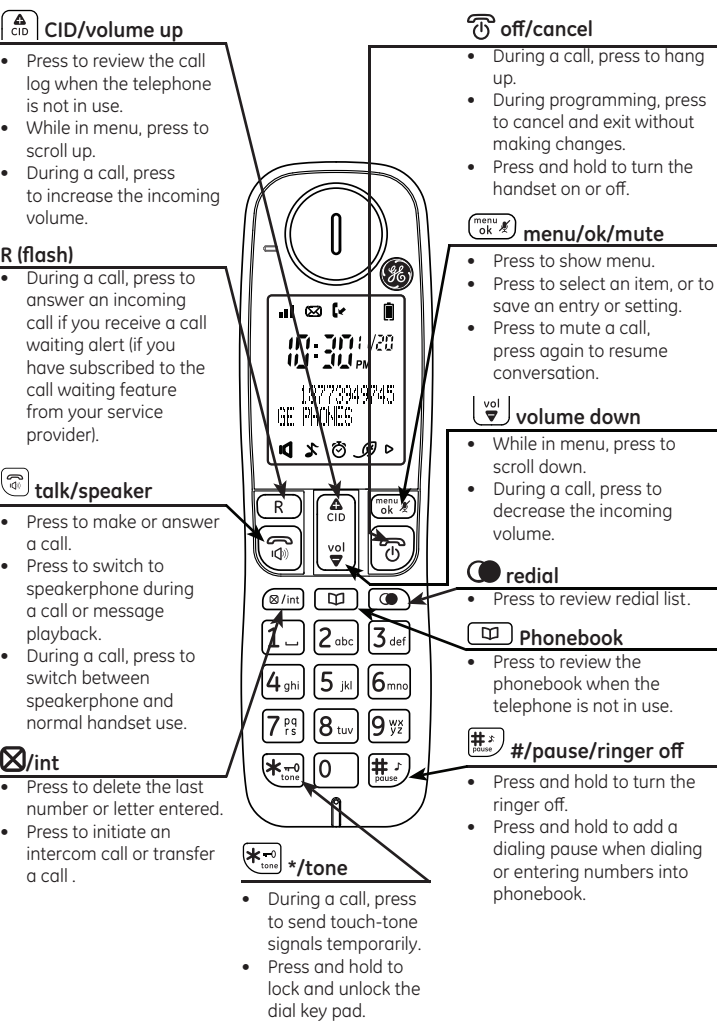

Screen display icon

Item	Meaning
[Signal strength icon]	• Displays when the telephone base is within reception range. • Flashes when the telephone base is out of range.
[Battery icon]	• Scrolls to indicate battery charging when handset is in the telephone base or charger. • Flashes and empty when battery level is low.
[Speaker icon]	• Speakerphone is in use.
[New call icon]	• Displays when there are new calls.
[Mail icon]	• Displays when there is a new voice mail message. (Available only if you have subscribed to voice mail service from your telephone service provider.)
[Energy saving icon]	• Energy saving mode is activated.
[Alarm icon]	• Displays when the alarm is set.
[Ringer icon]	• Displays when the ringer is turned off.

Initial settings

Dialing mode

To change the dialing mode:

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADV SETTING** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **DIAL MODE** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: Select the desired setting -> **[OK]**.

Area code

If you program your area code, the caller ID history displays the telephone numbers with the area code filtered.

To set the area code:

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADV SETTING** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **AREA CODE** -> **[OK]**.
- Enter your area code -> **[OK]**.

Reset

This feature allows you to restore all system settings, except the answering system messages and phonebook, to default settings. This feature could be useful, for example, if you have forgotten the security code to access the answering system remotely.

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADV SETTING** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **RESET** -> **[OK]**.
- [OK]**.

NOTE: All settings under the **ANS SYSTEM**, **BLOCK LIST**, **PROGRAM DND**, **CLOCK & ALARM**, **SETTINGS**, **HANDSET TONES**, **BASE TONES** and **ADV SETTING** menus in the handset will be restored to default settings, the redial list and call log will also be cleared.

Flash time

This setting allows you to choose between **SHORT**, **MEDIUM** or **LONG** to accommodate the setting of your telephone service provider for using customer calling service, such as call waiting.

To change the flash time:

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **ADV SETTING** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **FLASH TIME** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: Select the desired setting -> **[OK]**.

Key tone

The handset can be programmed to emit a tone with each key press. To change the key tone setting:

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **HANDSET TONES** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **KEY BEEP** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **ON or OFF** -> **[OK]**.

Display language

To change the display language:

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **SETTINGS** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **LANGUAGE** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select the desired setting -> **[OK]**.

Equalizer

This feature allows you to change the balance of the audio of the handset to best suit your hearing.

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **SETTINGS** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **EQUALIZER** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select from **NATURAL**, **BASS** or **TREBLE**.
- [OK]**.

Energy save

This feature enables the handset to operate in energy saving mode. With this feature turned on, the handset will automatically turn the handset backlight off.

- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **SETTINGS** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **ENERGY SAVE** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: **ON or OFF** -> **[OK]**.

NOTE: When **ENERGY SAVE** is turned on, the **[ENERGY SAVE]** icon shows on the handset screen.

Do not disturb

When **DO NOT DISTURB (DND)** mode is activated, all incoming calls will be silent. This feature only silences the ringer, the incoming number, if you have subscribed to the caller ID service from your telephone service provider, will be recorded in the caller ID history as normal.

Global DND

When global DND is activated, all system handsets and the telephone base will be silent when there is an incoming call. Press the **DND** button on the telephone base to turn this feature on or off.

Handset DND

You can program individual handset to silence during predetermined time frames. This setting is independent to each handset and only silences the ringer of the handset programmed.

To program the **DND** time for individual handset








- [OK]**.
- [OK]**/**[VOLUME DOWN]**: **PROGRAM DND** -> **[OK]**.
- [OK]**/**[VOLUME DOWN]**: select the desired option -> **[OK]**.
- ONE TIME:** The telephone silences once during the set time.
DAILY: The telephone silences daily during the set time.
OFF: Turn DND off (settings completed).
- Enter the desired stop time. **[OK]**/**[VOLUME DOWN]**: select **AM** or **PM** -> **[OK]**.

NOTES: When global DND is turned on, individual handset will continue to be in DND mode even after the set DND time on the handset ends.

Clock and alarm





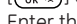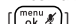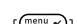



Date and time

You can set the date and time of the telephone system as follows.

1. : **CLOCK & ALARM** -> .
2. : **SET DATE/TIME**.
3.  again: **SET DATE/TIME**.
4. Enter the current month, day and year.
5. .
6. Enter the current hour and minute. : select **AM** or **PM** -> .

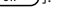



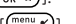




Time format

The display format of time can either be selected as 12 hour or 24 hour. To change your setting:

1. .
2. : **CLOCK & ALARM** -> .
3. : **SET FORMAT** -> .
4.  again -> **TIME FORMAT**.
5. : select the desired setting (**12 HOURS** or **24 HOURS**) -> .

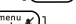



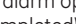




Date format

The display format of date can either be selected as Month/Day or Day/Month. To change your setting:

1. .
2. : **CLOCK & ALARM** -> .
3. : **SET FORMAT** -> .
4. : **DATE FORMAT** -> .
5. : select the desired setting (**MM/DD** or **DD/MM**) -> .



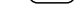


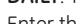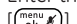

Alarm

The alarm can be programmed to sound once or daily for one minute. The alarm setting is independent to each handset.

1. .
2. : **CLOCK & ALARM** -> .
3. : **ALARM** -> .
4. : select the desired alarm option -> .
5. Turn alarm off (Settings completed).
6. **ONE TIME**: The alarm sounds once at the set time.
7. **DAILY**: The alarm sounds daily at the set time.
8. Enter the desired hour and minute -> : select **AM** or **PM**.
9. .

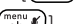
Alarm tone

You can select from 3 alarm melodies.



1. .
2. : **CLOCK & ALARM** -> .
3. : **ALARM TONE** -> .
4. : select the desired alarm tone -> .

Telephone operation


Make a call

1. Press .
2. Dial the phone number after you hear the dial tone.

Predial a call

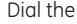1. Dial the phone number using the dial pad keys. If you make an error while dialing, you can press  to erase the last digit entered.
2. Press .

Answer a call

Press  to answer an incoming call.


When there is an incoming call, the screen and dial pad backlight will be on.

NOTE: The screen shows the elapsed time as you talk (in hours, minutes and seconds).





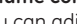


End a call

Press  or place the handset in the telephone base or charger to end a call.





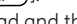


Speakerphone

- Anytime during a call, press  to switch between speakerphone and normal handset use. When the speakerphone is active, the handset screen shows .
- NOTE**: Using the speakerphone will drain the battery faster than the normal handset use.
- Volume control**
- You can adjust the volume of the handset or speakerphone anytime during a call.
- On the handset, press  to increase or  to decrease the volume.
- NOTE**: Only the listening volume can be adjusted.
- Make a call using the redial memory**
- The last ten telephone numbers previously dialed are stored in the redial list (up to 24 digits each).
1. Press .
 2. : select the desired phone number ->  to dial.

Save a number from the redial list to the phonebook



1. .
2. : select the desired phone number -> .
3. : **SAVE NUMBER** -> .
4. Enter the name by using the dial pad and then press .
5. Edit the number by using the dial pad if necessary, and then press .

Delete number from the redial list

1. .
2. : select the desired phone number -> .
3. : **DELETE** ->  twice to delete the selected number.
4. : **DELETE ALL** ->  twice to delete all numbers.

Mute

The mute function allows you to turn off the microphone while on a call. You can hear the other party but the other party cannot hear you.

1. Press  during a call.
2. Press  again to resume conversation.


NOTE: The screen shows **MUTE ON** when mute feature is activated.

Call waiting or call waiting with caller ID service

To use call waiting, you must subscribe to call waiting service from your telephone service provider. This feature allows you to receive calls while you are already talking on the phone. You will hear a call waiting alert tone when there is a second incoming call. If you subscribe to both caller ID and call waiting with caller ID services, the second caller's information is displayed after you hear the call waiting alert tone.


1. Press **R** to answer the second incoming call.
2. Press **R** to switch between calls.

Voice mail service

The  icon flashes on the screen when you have received a new voice mail message from your service provider.

IMPORTANT: Voice mail service is different from the answering system. In order to use the voice mail service, you must subscribe to it from your telephone service provider.


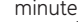

Using multiple handsets

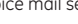The system allows a maximum of two handsets to have a conversation with an outside call at a time. If a handset is already on a call and you would like to join the call, press  on another handset.

The call will not be terminated until all handsets hang up.

Handset locator




You can locate a misplaced handset by paging it.

1. Press  on the telephone base. All registered handsets beep for one minute.
2. Press  on the telephone base or press  on any handset to stop paging.



Intercom (only applicable for models with multiple handset)

The system allows an intercom call between two handsets registered to the same telephone base.

To initiate an intercom call:

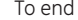


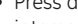
1. Press .
2. If your telephone system has only two handsets registered, the intercom call will be automatically directed to the other system handset.
3. If your telephone system has more than two handsets registered, enter the handset number you want to call by using the dial pad **1-5**.
4. Press  to answer the intercom call on the other handset.
5. To end the intercom call, press .

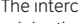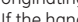NOTES:

- 1) The intercom call can be canceled before it is answered by pressing  or  to cancel.
- 2) If the handset being called does not answer within one minute, the paging will be canceled.



To answer an incoming call during intercom


You will hear an alert tone when you receive an incoming call during intercom.


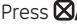
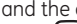
- Press  to answer the incoming call and end the intercom.
- Press  to answer the incoming call and put the intercom on hold. Press  to switch between intercom and the incoming call.
- Press and hold  to conference with both the incoming call and the intercom.

To initiate an intercom during a call

You can intercom with another system handset during a call, or invite another system handset to join.

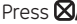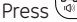1. Press  during a call.
 - If your telephone system has only two handsets registered, the intercom call will be automatically directed to the other system handset.
 - If your telephone system has more than two handsets registered, you will need to enter the handset number you want to intercom to by using the dial pad **1-5**.
2. The call is placed on hold while the intercom is established with the other handset.
3. Press  to answer the intercom on the other handset.




NOTE: The intercom call can be canceled before it is answered by pressing  to cancel.

3. You can choose from one of the following options for this intercom call.
 - Press and hold  to connect both handsets to the call.
 - Press  on the originating handset to alternate between the intercom and the call.
 - Press  on either handset to terminate the intercom on that handset. The call will continue on the other handset.

Push to talk (PTT) (only applicable for models with multiple handset)

To use call waiting, you must subscribe to call waiting service from your telephone service provider. This feature allows you to receive calls while you are already talking on the phone. You will hear a call waiting alert tone when there is a second incoming call. If you subscribe to both caller ID and call waiting with caller ID services, the second caller's information is displayed after you hear the call waiting alert tone.

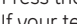




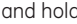

To initiate a PTT:

1. Press the **PTT** button on the right side of the handset.
 - If your telephone system has only two handsets registered, the broadcast will be automatically directed to the other system handset.
 - If your telephone system has more than two handset. Press  or  to select the handset you want to broadcast the message, or select **ALL HANDSET** to broadcast to all handsets and then press .
2. **PRESS AND HOLD (PTT) TO TALK** shows on the screen when the connection is set between the initiating handset and the destination handset.
3. Press and hold the **PTT** button on either handset to start the broadcast.

NOTE: Connection set between handsets lasts for 30 minutes after it is established, or 30 minutes after the last broadcast. You will need to perform the above operation again if you want to initiate a PTT to another system handset or after the 30-minute time out.

Phonebook

Add a phonebook record

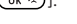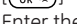1. .
2. : select any entry -> .
3. : **DELETE ALL**.
4. : **ADD NEW**.
5. Enter the name (max. 14 character). Press the key to the corresponding character to display the correct letter. See the character table for more information.
6. Enter the number (max. 20 digits). If you need a pause between digits, press and hold the  until a **P** appears in the display. This will insert a 3-second pause in the dialing sequence.
7. .


NOTES:

- 1) The phonebook is shared by all handsets. Changes made to the phonebook on any one handset apply to all.
- 2) The directory can store up to 100 entries with up to 20 digits for each telephone number and 14 characters for each name.

Character table


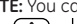





Use the dial pad and the chart below to enter a name (up to 14 characters). Each press of a particular key displays the character in the following order:

Dial pad key	Character by number of key presses					
	1	2	3	4	5	6
[1]	space	1	-	<	>	?
[2]	A	B	C	2		
[3]	D	E	F	3		
[4]	G	H	I	4		
[5]	J	K	L	5		
[6]	M	N	O	6		
[7]	P	Q	R	7		
[8]	T	U	V	8		
[9]	W	X	Y	9		
[0]	0	-	/		#	+

NOTE: Press  to correct an error.

To view/call a phonebook record




Records are stored alphabetically in the phone book. To search the phonebook:

1. .
2. : You can also access the phonebook by pressing  and selecting **PHONEBOOK**.
3. : to call the displayed entry.
4. : to view the phone number.
5. : **DELETE ALL** to delete all records ->  twice.







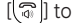


Chain dialing

This feature allows you to initiate a dialing sequence from numbers stored in the phonebook while you are on a call. This feature is useful if you wish to access another numbers (such as bank account information or access code) from the phonebook.






To access a number in the phonebook while on a call:

1. .
2. : to locate the desired entry.
3. : to dial the number.




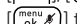

Edit a phonebook entry

1. .
2. : locate a desired entry -> .
3. : **EDIT CONTACT** ->  twice.
4. Edit the name by using the  key to erase and backspace, then enter new characters using the dial pad keys and press .
5. Edit the number by using the  key to erase and backspace, then enter new numbers using the dial pad keys and press .

Delete a phonebook entry

1. .
2. : locate the desired entry -> .
3. : **DELETE CONTACT**.
4.  3 times to delete the selected entry.

Delete all phonebook entries

1. .
2. : select any entry -> .
3. : **DELETE ALL**.
4.  twice to delete all entries.





Caller ID

Using Caller ID service




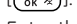
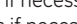

IMPORTANT: To use the Caller-ID capabilities of this telephone system, you must subscribe to Caller-ID services from your service provider. Check with your telephone service provider for details. Your telephone stores caller ID memory for the 50 most recent calls. Each entry holds up to 20 digits for the telephone number and 14 characters for the name.

Review/call from the call log

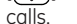






As calls are received and stored, the display is updated to let you know new calls have been received. To scroll through the caller ID records:

1. .
2.  to view from the most recent calls, or  to view from the oldest calls.
3. When the desired record is displayed, press  to call.

Save a number to the phonebook

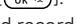1. .
2. : locate the desired record -> .
3. : **COPY TO PHBK**.
4. Enter the name by using the dial pad keys if necessary -> .
5. Edit the number by using the dial pad keys if necessary -> .

Delete caller ID record

1. .
2. : locate the desired record -> .
3. : **DELETE** to delete the selected record ->  twice.
4. : **DELETE ALL** to delete all records ->  twice.

Troubleshooting guide

If your telephone system is not operating properly, first try this general reset procedures:

1. Unplug all power adapters from the power outlets.
2. Disconnect the telephone line cord from the base or modular jack.
3. Remove the battery compartment covers and unplug all handset battery packs.
4. After a few minutes, re-install all handset battery packs, making sure that the connectors are snug and the wires are not pinched before replacing all battery compartment covers.
5. Plug the power adapters for the base and any chargers back into their power outlets. Be sure not to use outlets that are controlled by wall switches or timers.
6. Place all handsets in the telephone base or chargers to charge without interruption for at least 30 minutes before use.
7. Plug the line cord into the telephone base or modular jack and verify operation.

General Performance

Problem	Cause/solution
Cannot hear a dial tone.	<ul style="list-style-type: none">• Increase the volume on the handset.• Disconnect the telephone line cord from the base unit and connect it to a known working telephone. If the known working telephone operates properly, contact our customer support center for warranty information.
Handset does not ring.	<ul style="list-style-type: none">• The ringer may be off. Increase the ringer volume.• Make sure your handset is charged.
You experience audible static, noise, or fading in and out.	<ul style="list-style-type: none">• The handset may be near the end of range limit. Move the handset closer to the base unit.• If you are using a line with DSL service, make sure you have properly installed the DSL filters supplied by your service provider.• Try to relocate the base unit and use the handset away from sources of electrical interference.

Caller ID

Problem	Cause/solution
Caller-ID information is not displayed.	<ul style="list-style-type: none">• You must subscribe to Caller ID service from your service provider/telephone company.• Make sure the base unit is plugged directly into a telephone modular jack. If you are using a line with DSL service, make sure you have properly installed the DSL filters supplied by your service provider.
While on a call, new caller-ID information is not displayed.	<ul style="list-style-type: none">• You must subscribe to Caller ID with Call Waiting service from your service provider/telephone company.

General Product Care

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone only with a dry soft cloth.
- Never use cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical products to clean the unit. Doing so will damage the unit.
- Retain the original packaging in case you need to ship the phone at a later date.

Important Safety Instructions

Some of the following information may not apply to your particular product; however, when using telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand